

Böttcher Protection Gloves

Correct Use

Protective gloves should be used whilst handling printing chemicals. In order to protect your hands, please consider the following steps when using gloves.

Pulling the gloves on

Select the correct size and ensure they fit properly, not too large or too small. Before each use check the gloves for impurities inside the gloves as well as for damage e.g. holes, tears or abrasion. Do not use contaminated or damaged gloves. Hands should be clean and dry. Avoid damaging by overstretching, fingernails, rings etc, whilst pulling on the gloves.

Working with gloves

In order to prevent printing chemicals flowing into the gloves while working overarms roll up the gauntlet. Gloves can only be used effectively with printing chemicals for a relatively short period because their protection will lessen with time.


Please consider the service life mentioned below and do not exceed it. For hygienic reasons gloves should not be used for longer than 5 days maximum. Used gloves have to be disposed of in accordance with the requirements of the particular chemical.

Böttcher printing chemicals

service life*

UV-Waschmittel	121 – 240 Min.
Konventionelle Waschmittel	> 480 Min.
Isopropanol (IPA)	> 480 Min.

*Service life of the gloves depends on the operation and the purity of chemicals and can vary from the time mentioned above. If in doubt, please do not hesitate to contact us. If using other Böttcher printing chemicals we are pleased to assist you.

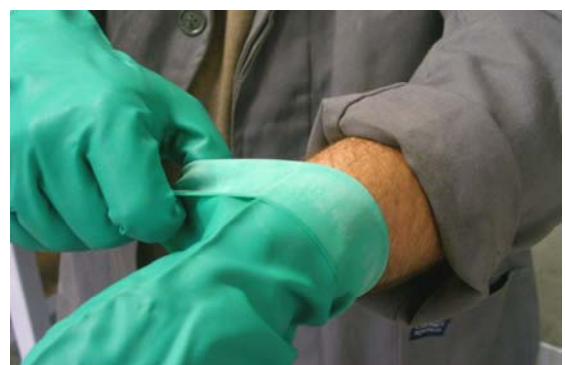

Cleaning the gloves

Before removing the gloves, rinse the gloves carefully with water in order to avoid contact with unprotected skin.









Taking the gloves off

Slightly loosen the gloves from the fingertips, turn out the gauntlet and remove the gloves carefully. Avoid skin contact with the outer surface of the gloves.

Storage of gloves

Used gloves should be disposed of according to the regulations or stored in such a way that they can be dried well inside. Wash your hands thoroughly with BöttcherPro Liposol and water. Afterwards cream your hands with fatty and moisturizing hand care cream.

Characteristics

-  Protective gloves made from high quality nitrile rubber
-  Excellent chemical resistant against conventional and UV-Washes
-  Good tear resistance
-  Secure grip through diamond structure of surface
-  Velour lining, gives a particularly comfortable feel
-  Palm thickness **Blue** 0.84 mm, **Green** 0.40 mm
-  Protective gloves **Blue** available in sizes 7 ½, 8 ½ and 9 ½
-  Protective gloves **Green** available in sizes 9,5, 10,5 and 11

PVC powder-free, one way gloves are only effective for short term exposure and protection against printing chemicals and printing inks.

